
INSTALLATION INSTRUCTIONS

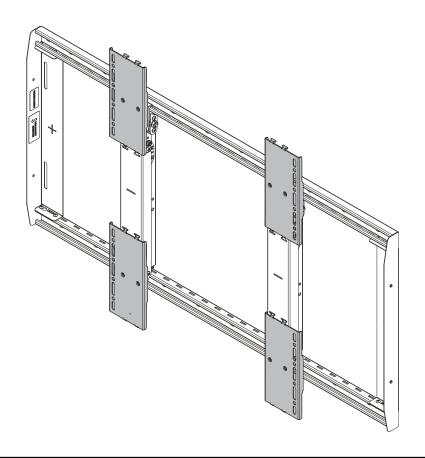

Interface Extender Brackets



FHB5174

FHB5174 Installation Instructions

DISCLAIMER

Legrand | AV and its affiliated corporations and subsidiaries (collectively "Legrand | AV"), intend to make this manual accurate and complete. However, Legrand | AV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Legrand | AV makes no representation of warranty, expressed or implied, regarding the information contained herein. Legrand | AV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Legrand AV Inc.



IMPORTANT SAFETY INSTRUCTIONS

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.



WARNING: Failure to provide adequate structural strength for this accessory can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this accessory is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the accessory.



WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located attached to the FHB5174 accessory does not exceed with weight capacity of the mounting system to which it is being attached.



WARNING: Use this accessory only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.




WARNING: Never operate this accessory if it is damaged. Return the accessory to a service center for examination and repair.



WARNING: Do not use this product outdoors.


--SAVE THESE INSTRUCTIONS--

DIMENSIONS

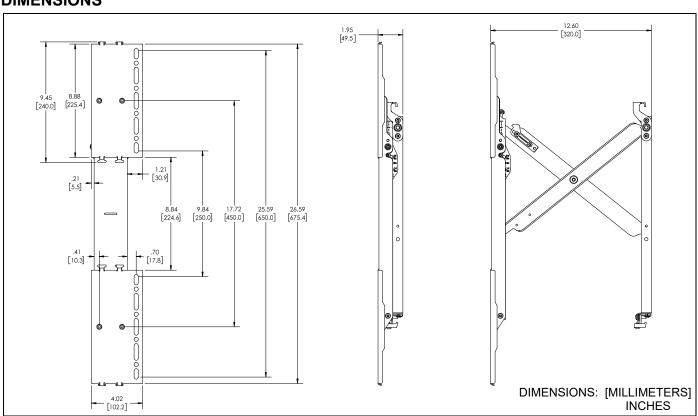

Installation Instructions FHB5174

TOOLS / PARTS FOR INSTALLATION

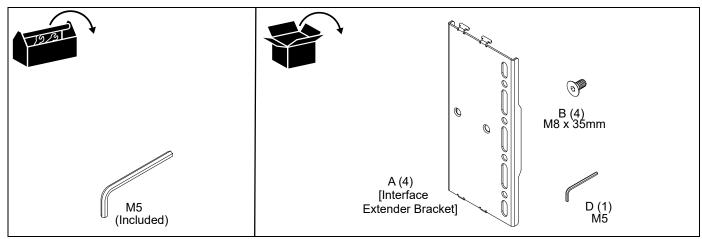

ASSEMBLY AND INSTALLATION

IMPORTANT!: The FHB5174 extender brackets were designed to increase the length of AS3LD or FPIWM Series uprights. Do not use with any other type of mounting system.

 Disassemble AS3LD uprights by removing four flat head screws holding uprights together. Set screws aside for reuse. (See Figure 1)

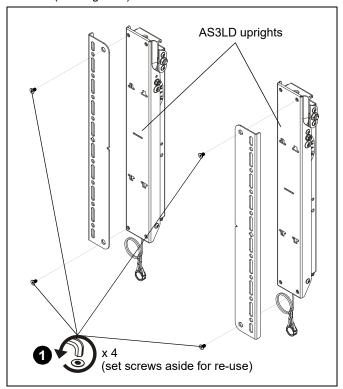


Figure 1

- 2. Insert extender brackets (A) into slots on AS3LD brackets. (See Figure 2)
- Use four screws removed in Step 1 and four #10-24 x 3/8" flat head cap screws (B) to secure extender brackets (A) to AS3LD brackets. (See Figure 2)

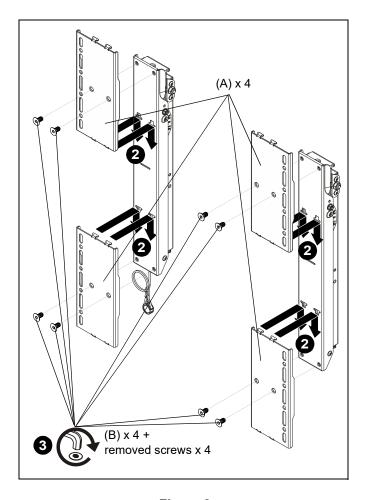


Figure 2

4. Connect extender brackets (A) to back of display following AS3LD or FPIWM Series installation instructions using hardware supplied with mounting system.

FHB5174 Installation Instructions



8800-003399 Rev00 ©2023 Legrand | AV www.legrandav.com 10/2023 **USA/International** A 6436 City West Parkway, Eden Prairie, MN 55344

P 800.582.6480 / 952.225.6000

F 877.894.6918 / 952.894.6918

A Franklinstraat 14, 6003 DK Weert, Netherlands

P +31 (0) 495 580 852

Europe

F +31 (0) 495 580 845

Asia Pacific A Office No. 918 on 9/F, Shatin Galleria

18-24 Shan Mei Street

Fotan, Shatin, Hong Kong

P 852 2145 4099F 852 2145 4477

