
# INSTALLATION INSTRUCTIONS



**AS3LD Camera Shelf** 

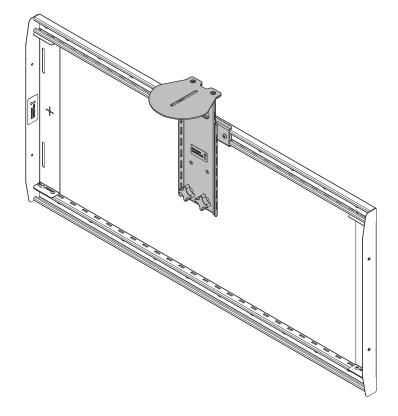



## DISCLAIMER

Legrand | AV and its affiliated corporations and subsidiaries (collectively "Legrand | AV"), intend to make this manual accurate and complete. However, Legrand | AV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Legrand | AV makes no representation of warranty, expressed or implied, regarding the information contained herein. Legrand | AV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Legrand AV Inc.

#### DEFINITIONS

 
**MOUNTING SYSTEM:** A MOUNTING SYSTEM is the primary Chief product to which an accessory and/or component is attached.

**ACCESSORY:** AN ACCESSORY is the secondary Chief product which is attached to a primary Chief product, and may have a component attached or setting on it.

**COMPONENT:** A COMPONENT is an audiovisual item designed to be attached or resting on an accessory or mounting system such as a video camera, CPU, screen, display, projector, etc.

**WARNING:** A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

**CAUTION:** A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all accessories are properly assembled and installed using the instructions provided.

**WARNING:** Failure to provide adequate structural strength for this accessory can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this accessory is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the mounting system.

**WARNING:** Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the AS3A100 accessory does not exceed 15 lbs (6.8 kg).


**WARNING:** Use this accessory only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

**WARNING:** Never operate this accessory if it is damaged. Return the accessory to a service center for examination and repair.


**IMPORTANT !:** The AS3A100 accessory is designed to be mounted to a Chief® AS3LD mounting system.

### --SAVE THESE INSTRUCTIONS--


#### DIMENSIONS

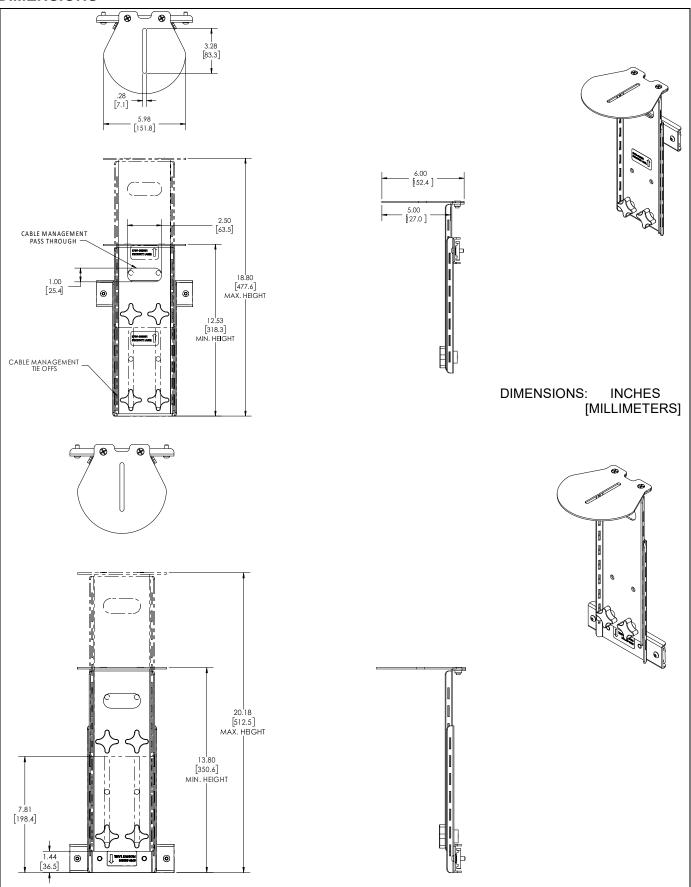

#### **DIMENSIONS (CONTINUED)**

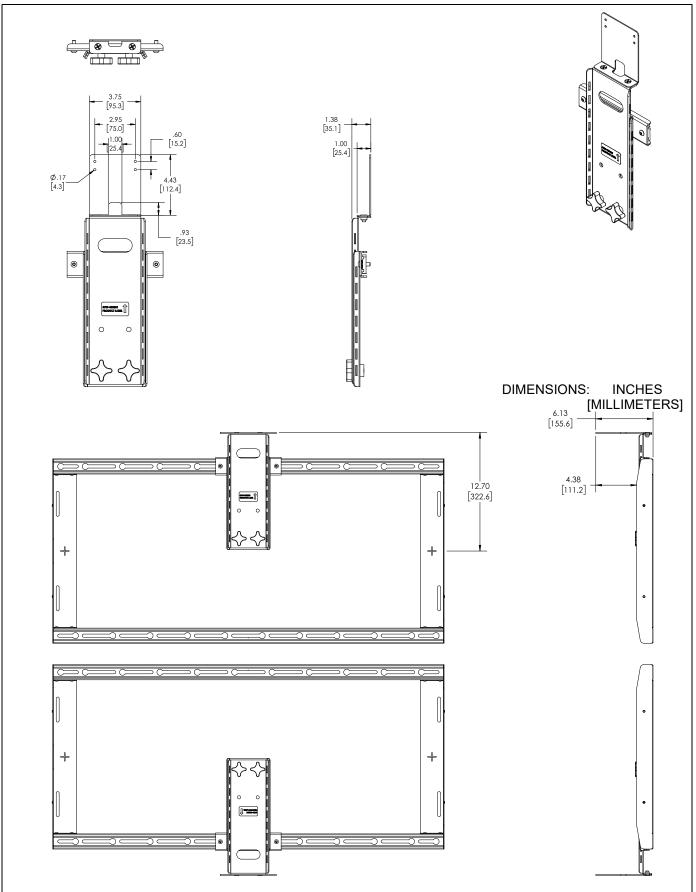


#### **DIMENSIONS (CONTINUED)**

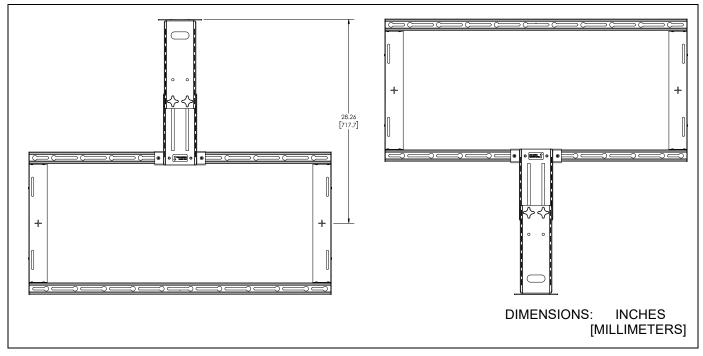


#### LEGEND

EGEND		
	Tighten Fastener	Pencil Mark
	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
	Loosen Fastener	Drill Hole
	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
A	Phillips Screwdriver	Adjust
	Destornillador Phillips	Ajustar
	Kreuzschlitzschraubendreher	Einstellen
	Chave de fendas Phillips	Ajustar
	Cacciavite a stella	Regolare
	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
	Open-Ended Wrench	Remove
	Llave de boca	Quitar
	Gabelschlüssel	Entfernen
	Chave de bocas	Remover
	Chiave a punte aperte	Rimuovere
	Chiave a punce apence	rundevere
	Steeksleutel	Verwijderen
	Steeksleutel	Verwijderen
	Steeksleutel Clé à fourche	Verwijderen Retirez
	Steeksleutel       Clé à fourche       By Hand	Verwijderen Retirez Optional
Ex (	Steeksleutel Clé à fourche By Hand A mano	Verwijderen Retirez Optional Opcional
	Steeksleutel         Clé à fourche         By Hand         A mano         Von Hand	Verwijderen Retirez Optional Opcional Optional
	Steeksleutel         Clé à fourche         By Hand         A mano         Von Hand         Com a mão	Verwijderen Retirez Optional Opcional Opcional Opcional Opcional
E Contraction of the second se	Steeksleutel         Clé à fourche         By Hand         A mano         Von Hand         Com a mão         A mano	Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opcional
	Steeksleutel   Clé à fourche   By Hand   A mano   Von Hand   Com a mão   A mano   Met de hand	Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opcional Opcional Opcional Opcional
	Steeksleutel   Clé à fourche   By Hand   A mano   Von Hand   Com a mão   A mano   Met de hand   À la main	Verwijderen Retirez Optional Opcional Optional Opcional Opcional Opzionale Optie En option
	Steeksleutel   Clé à fourche   By Hand   A mano   Von Hand   Com a mão   A mano   Met de hand   À la main   Hex-Head Wrench	Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opzionale Optie En option Security Wrench
	Steeksleutel   Clé à fourche   By Hand   A mano   Von Hand   Com a mão   A mano   Met de hand   À la main   Hex-Head Wrench   Llave de cabeza hexagonal	Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad
	Steeksleutel   Clé à fourche   By Hand   A mano   Von Hand   Com a mão   A mano   Met de hand   À la main   Hex-Head Wrench   Llave de cabeza hexagonal   Sechskantschlüssel	Verwijderen         Retirez         Optional         Opcional         Opcional         Opcional         Opcional         Opcional         Opcional         Optie         En option         Sicherheitsschlüssel
	Steeksleutel   Clé à fourche   By Hand   A mano   Von Hand   Com a mão   A mano   Met de hand   À la main   Hex-Head Wrench   Llave de cabeza hexagonal   Sechskantschlüssel   Chave de cabeça sextavada	Verwijderen         Retirez         Optional         Opcional         Opcional         Opcional         Opzionale         Optie         En option         Security Wrench         Llave de seguridad         Sicherheitsschlüssel         Chave de segurança

#### TOOLS REQUIRED FOR INSTALLATION

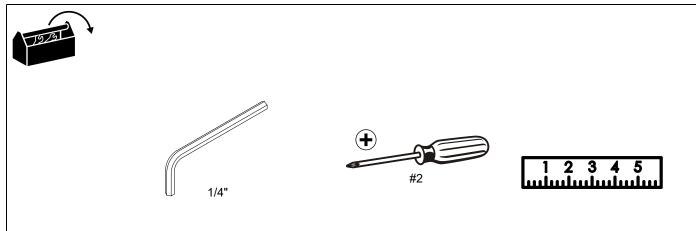



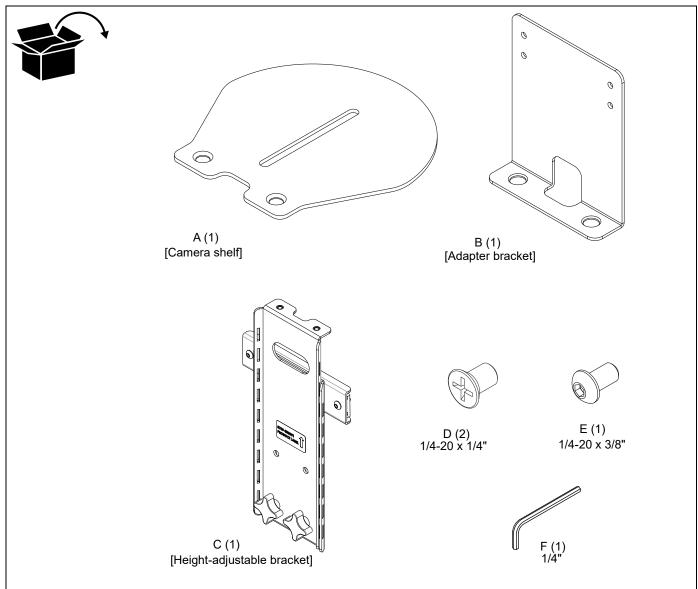

#### **Assembly And Installation**

**IMPORTANT !:** If installing to displays larger than 65", height-adjustable bracket (C) will need to be disassembled and reassembled in order to achieve a longer length. For smaller displays, proceed to Step 3.

(Displays 65" and larger ONLY) Remove height-adjustment knobs from height-adjustable bracket (C). (See Figure 1) 1.

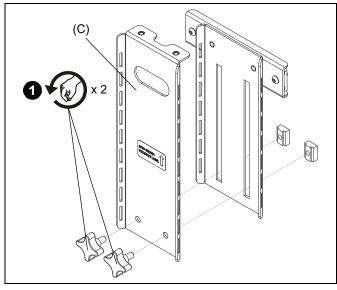
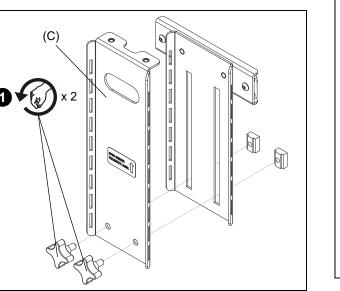



Figure 1

(Displays 65" and larger ONLY) Rotate extension bracket 180° and re-install height-adjustment knobs to secure brackets in new orientation. (See Figure 2) 2.



 

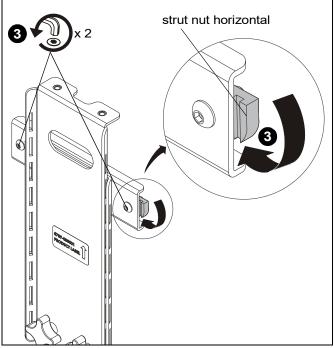
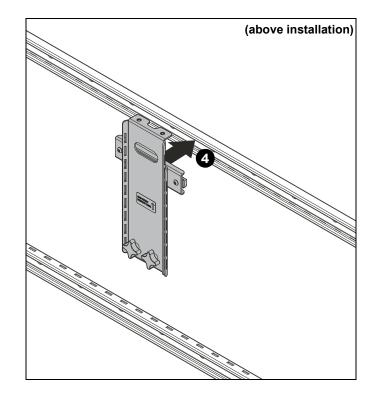


Figure 3

- Install height-adjustable bracket (C) onto AS3LD mount at desired mounting position. (See Figure 4) 4.
- NOTE: AS3A101 shelf can be installed above or below display.



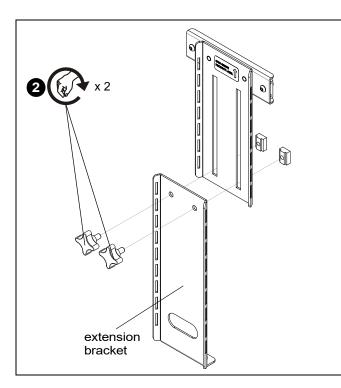


Figure 2

5. Rotate strut nuts until they are back in a vertical position and tighten button head cap screws. (See Figure 5)


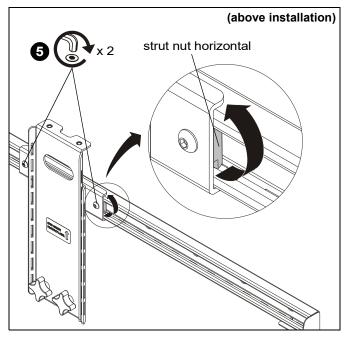


Figure 5

- **NOTE:** If installing a camera requiring adapter bracket (B), proceed to Step 7.
- Use two 1/4-20 x 1/4" Phillips flat head screws (D) to secure camera shelf (A) to height-adjustable bracket (C). (See Figure 6)

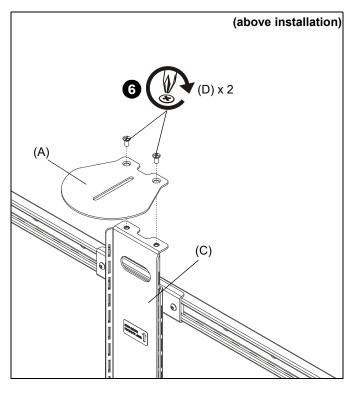

 Use two 1/4-20 x 1/4" Phillips flat head screws (D) to secure adapter bracket (B) to height-adjustable bracket (C). (See Figure 7)


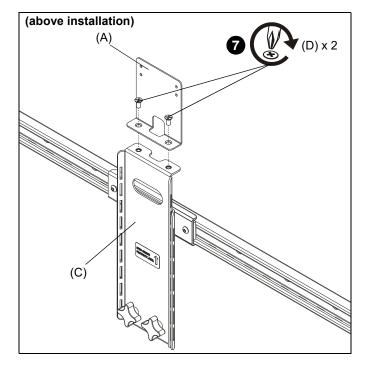


Figure 7

#### **Camera Installation**

**WARNING:** Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the AS3A100 accessory does not exceed 15 lbs (6.8 kg).

 Use 1/4-20 x 3/8" button head cap screw (E) or screw provided with camera to secure camera to shelf. (See Figure 8)

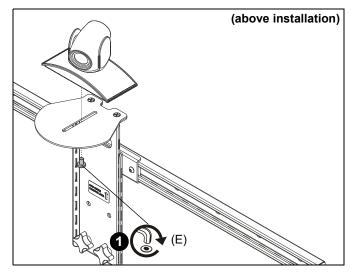



#### **Height Adjustment**

- 1. Loosen height-adjustment knobs on height-adjustment bracket (C). (See Figure 9)
- 2. Adjust height to desired height. (See Figure 9)
- 3. Tighten height-adjustment knobs on height-adjustment bracket (C). (See Figure 9)

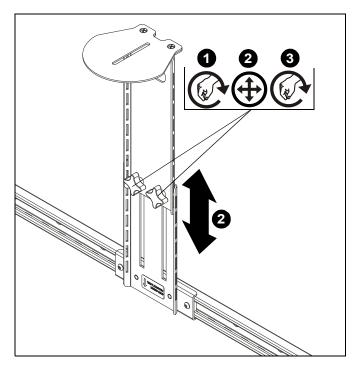


Figure 9



8800-003396 Rev00 ©2023 Legrand | AV www.legrandav.com 10/2023

#### Europe

Asia Pacific

- USA/International A 6436 City West Parkway, Eden Prairie, MN 55344
  - Ρ 800.582.6480 / 952.225.6000
  - **F** 877.894.6918 / 952.894.6918
  - A Franklinstraat 14, 6003 DK Weert, Netherlands
  - Ρ +31 (0) 495 580 852
  - F +31 (0) 495 580 845
  - A Office No. 918 on 9/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong
  - **P** 852 2145 4099
  - F 852 2145 4477

